




Canon PowerShot S230 Display Screen Replacement

A short guide on replacing a Canon PowerShot S230 display screen.


Written By: Will Appleton

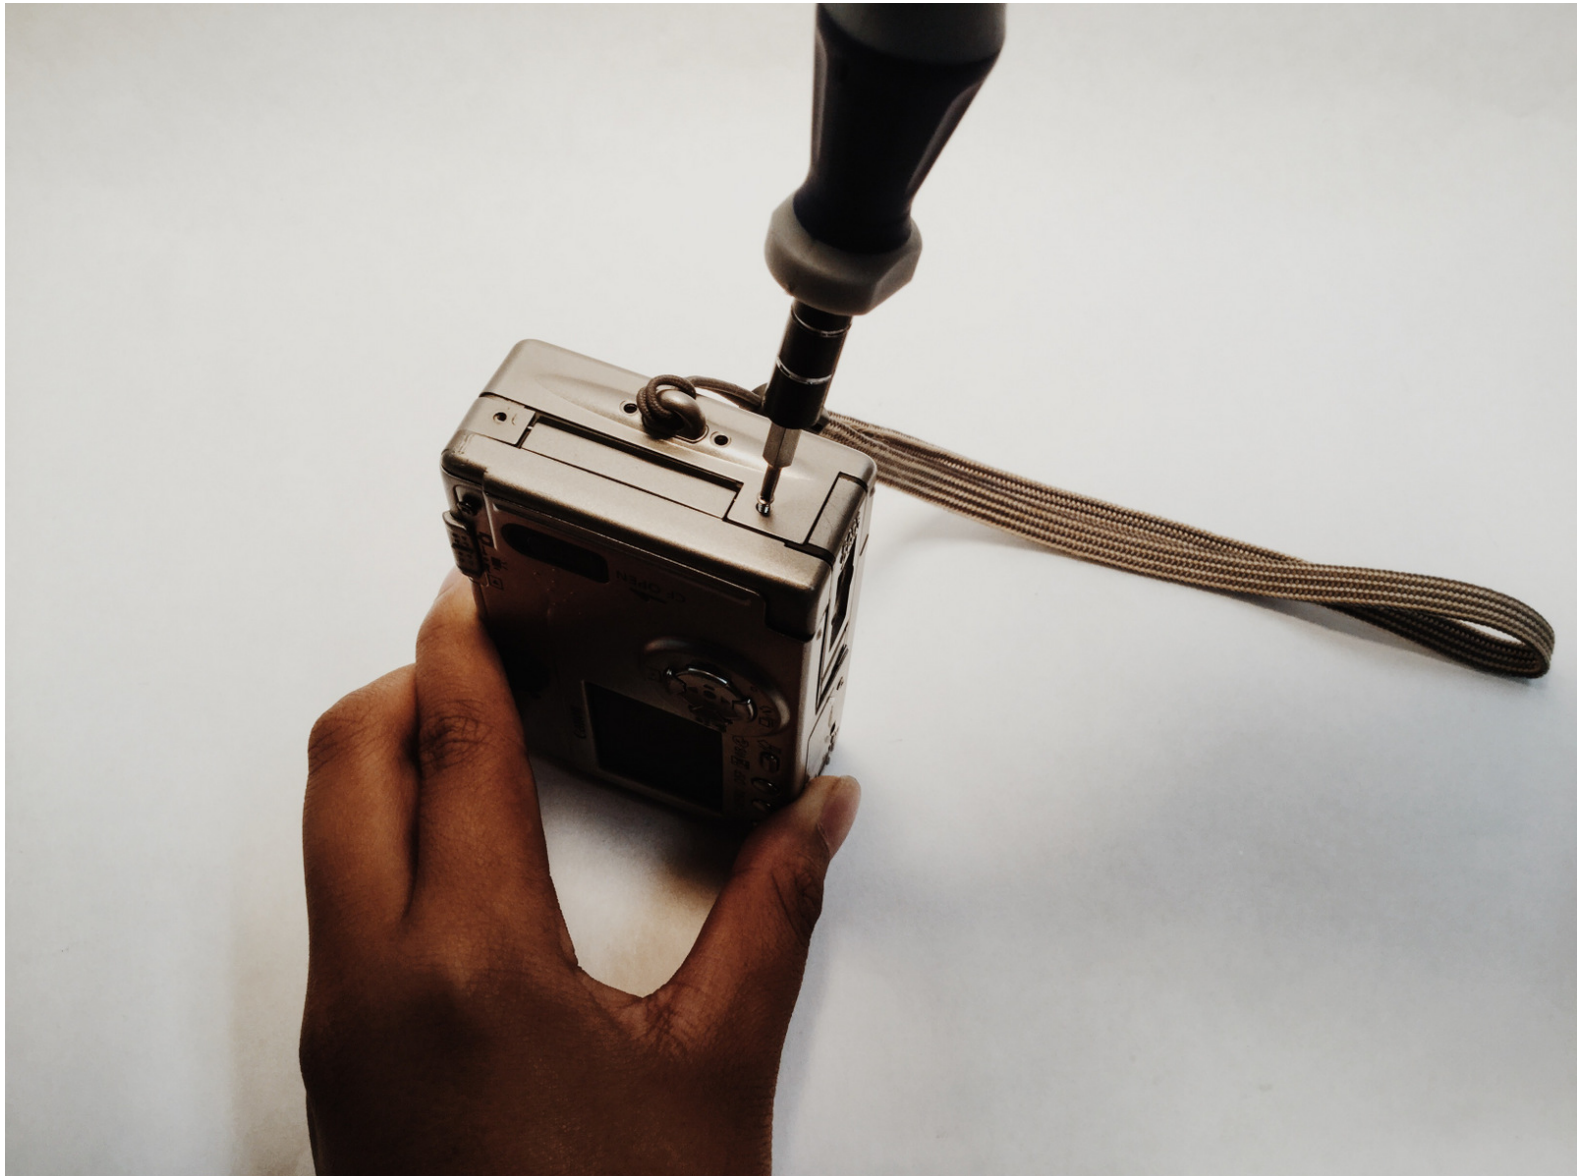

INTRODUCTION


Use this guide to replace the screen of the Canon PowerShot S230. The guide focuses mainly on the removal of screws and display screen. Fairly simple.

Step 1 — Display Screen

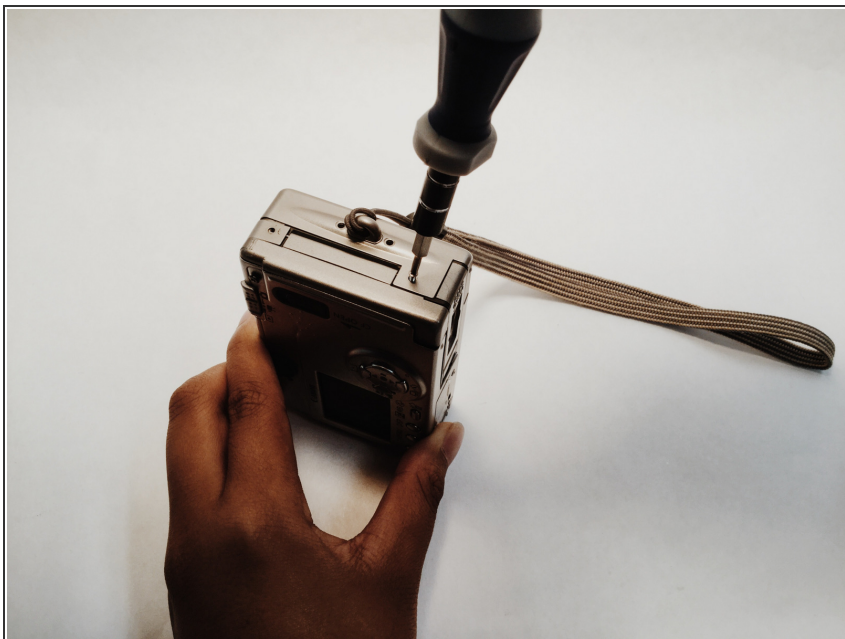



- Using a philips head screw remove the screw on the outside casing of the camera. Set these aside you will need them for re-assembly.

Step 2

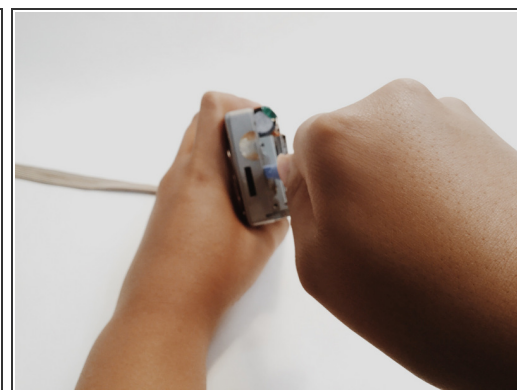


- Using a pry tool pry open the outer casing of the camera in order to access the inside components. Set aside you will need this for re-assembly.

Step 3

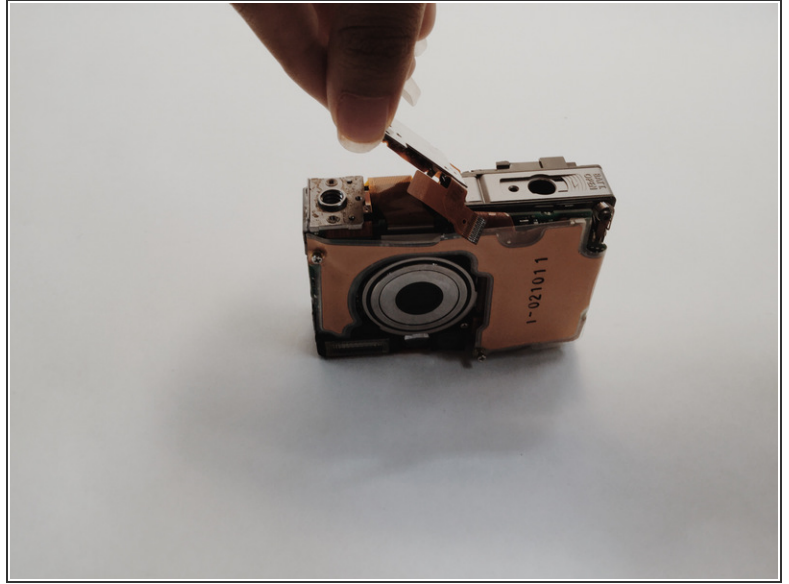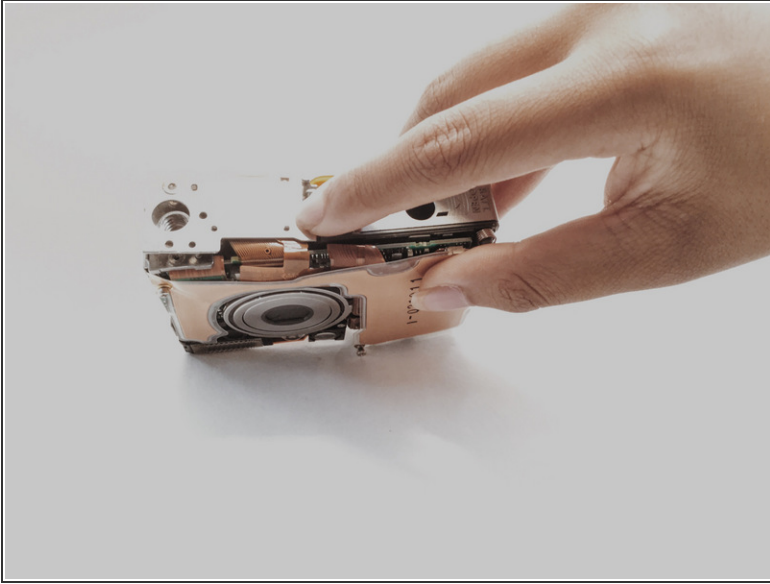


- Remove the metal shield and screws from the bottom interior of the camera.

Step 4

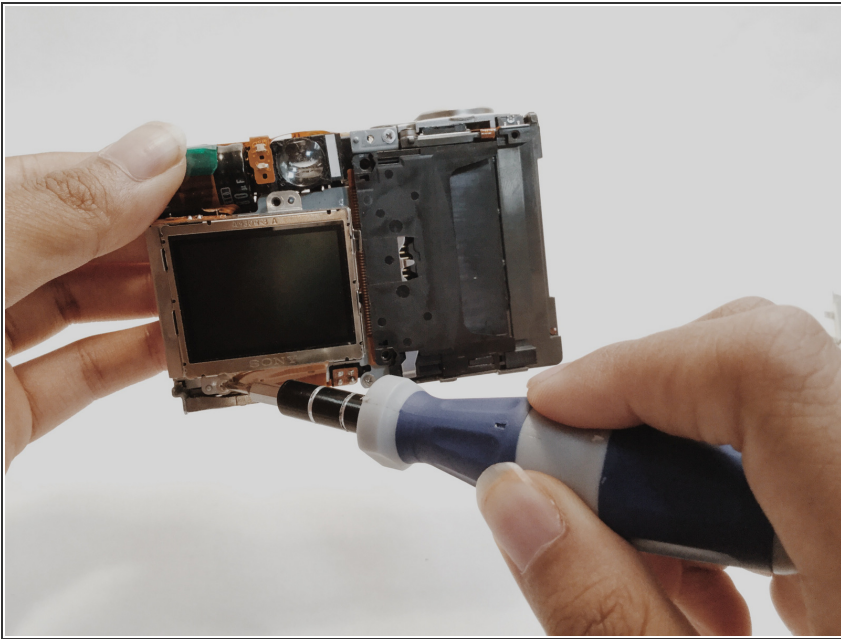

- Remove the screws securing the screen.

Step 5

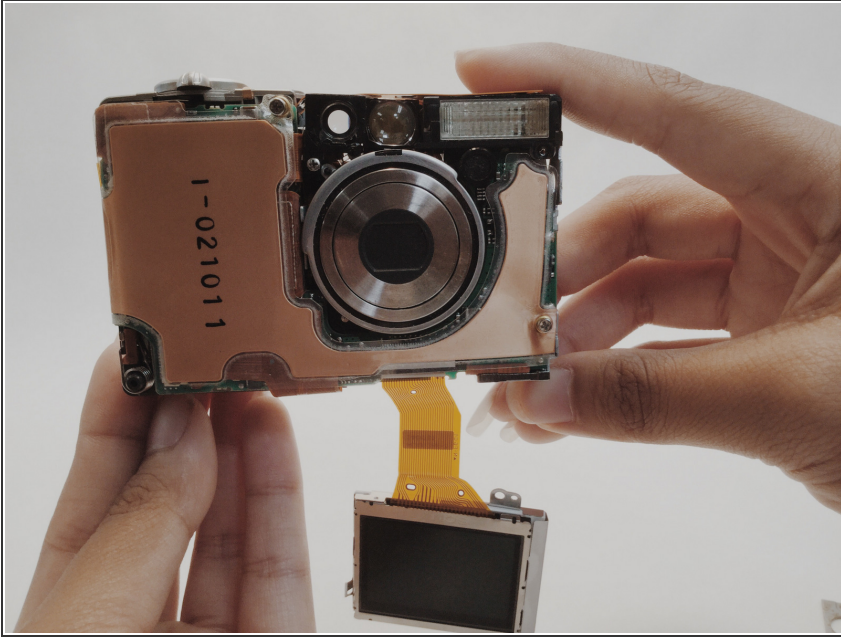

- Remove screws on the copper facing from the front facing part of the camera. Underneath is a connection to the screen; wiggle it to pull it out, it may take some force.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 03:16:56 AM.